



Using the PCMCIA Slots


To access the PCMCIA Slots, you must do two things ...

1. Insert a PC Card into the PC slot - Type III into lower slot and Type I or II into either slot. Inserting a Type III card takes up all the space for both slots - you cannot have a Type III card installed with any other card.
2. Access the Storage Card folder. The folder for a PC Card in the bottom slot is called 'Storage Card Lower' and the folder for a PC Card in the top slot is called 'Storage Card Upper'.



Accessing the Storage Card folder ...

Double-click on **My Handheld PC**. You will notice that there is now a **Storage Card Lower** folder and/or a **Storage Card Upper** folder.

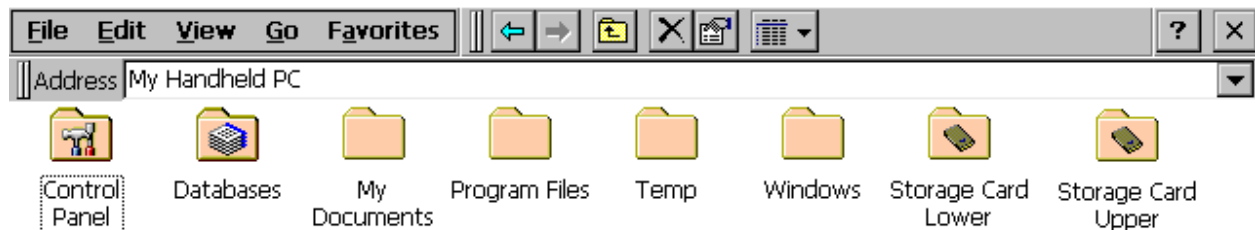

Double click on the folder to open it. This folder shows the contents of the PC Card in the slot. When you change PC Card, click on **View / Refresh** to refresh the contents of the folder.

Note: The folder represents the PC Card in the PCMCIA Slot. Copying files to and from the folder copies the files to and from the PC Card.