



DreamWriter®

Lithium Battery Signal Repair

Note: If the DreamWriter has a protective white strip protruding from the Lithium cover, be sure to remove it before use. This strip prevents contact between the battery and the unit. The lithium battery should last 2 to 3 years.

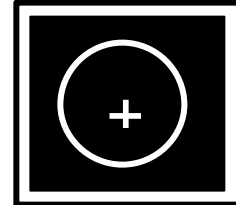

1. The Lithium battery may need to be re-seated. A Lithium battery symbol may appear if the Lithium battery is not making proper contact inside the DreamWriter. The Lithium battery should be removed to fix this problem. Turn DreamWriter off.
2. Locate the round lithium cover on the bottom of the DreamWriter.
3. Remove the lithium battery cover with a coin or screwdriver by pressing down on the cover and turning to the open position.
4. Remove the existing battery using a tissue. Push the battery toward the outer corner. Turn the DreamWriter over to allow the battery to fall out.
5. Do not touch the new battery with your hands. Use a tissue, as a fingerprint can restrict contact.
6. The copper spring catch holding the Lithium battery in place should be pulled gently toward the center of the compartment in order to hold the battery more securely.
7. There is a copper contact on the bottom of the battery compartment. Gently lift the curled ends up to contact the battery more securely.
8. The Lithium battery should be wiped down with a soft, lint free cloth before reinserting since skin oils may break contact between the battery and the unit.
9. To replace the battery, place the battery with the positive symbol facing up. Slide the leading edge under spring catch, the position the battery in the center of the compartment.

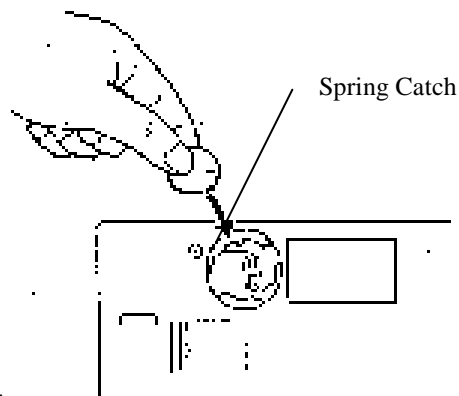

10. Replace the battery cover.

**IF YOU HAVE ANY QUESTIONS ABOUT THIS PROCEDURE PLEASE CALL
NTS CUSTOMER SUPPORT AT (800) 663-7163 OR E-MAIL service@dreamwriter.com.**

Revised: 02/14/01

Lithium Battery Signal Repair

400.012

DreamWriter, Rol-A-Lab, DreamLink, DreamWriter logo, Rol-A-Lab logo and NTS logo are Trademarks of NTS Computer Systems Ltd. registered in the US and other countries. All other trademarks are property of their respective companies.